

**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Equipment List**

**Component**

**Manufacturer/Model**

**Nozzle**

Healy Model 900<sup>1</sup>  
(Figure 1A-1)

**Tank Pressure Management System**

Healy Model 9961 Clean Air Separator  
(Figure 1A-2)

**Inverted Coaxial Hoses**

Healy Model 75 Series (3/4" I.D.)  
(Figures 1A-4 and 1A-5)  
75W-XXX-YZYZ

Where

W represents color of hose (varies)

Note: Product label will have an "X" in  
this position for all hose colors

XXX represents hose length

First two digits for length in feet

Last digit - length in tenths of foot

Note: Product label will have "XXX" in  
this position for hose length

Y represents hose end type

S = Swivel End

F = Fixed End

Z represents thread type

2 = Healy Straight Thread

3 = Metric Thread

4 = Balance-Type Thread

---

<sup>1</sup> Nozzle can have either a two position or three position hold open clip (see Figure 1A-1).

<b>Component</b>	<b>Manufacturer/Model</b>
------------------	---------------------------

<b>Dispenser Conversion Adaptors (Optional)<sup>2</sup></b>	
---	--

	Healy Model CX6-A (Required on Gasboy, Global Century, Reliance and Select Dispensers)
--	---

	Healy Model CX6-VV1A*
--	-----------------------

	Healy Model CX6-VV2A*
--	-----------------------

	Healy Model CX6-VV3A*
--	-----------------------

	(Figure 1A-6)
--	---------------

Note: Items marked with asterisk (\*) are no longer manufactured, but may be used for dispenser retrofit.

<b>Reconnectable Breakaway Coupling</b>	
---	--

	Healy Model 8701VV
--	--------------------

	(Figure 1A-7)
--	---------------

	Healy Model 807 Swivel
--	------------------------

	(Figure 1A-8)
--	---------------

<b>Flow Limiter<sup>3</sup></b>	
---------------------------------	--

	Healy Model 1301
--	------------------

	(Figure 1A-9)
--	---------------

	Healy Model 1302
--	------------------

	(Figure 1A-10)
--	----------------

<b>Pressure/Vacuum Valves</b>	
-------------------------------	--

	Husky Model 4885
--	------------------

<b>Dispenser Vacuum Pump</b>	
------------------------------	--

	Healy Model VP1000 Vacuum Pump
--	--------------------------------

	Healy/Franklin Electric Model VP1000
--	--------------------------------------

	Vacuum Pump
--	-------------

	(Figure 1A-3)
--	---------------

---

<sup>2</sup> If optional components are installed or required by regulations of other agencies, only those components and model numbers specified above shall be installed or used.

<sup>3</sup> Flow limiter is mandatory when the flow rate is greater than 10.0 gallons per minute to comply with US EPA requirement. 1301 is used with 8701VV breakaway. 1302 is used with 807 swivel breakaway.

**Component  
Dispensers**

**Manufacturer/Model**

Note: Unihose dispensers shall be required unless  
as provided by Section 4.10 of CP-201.

Gilbarco Encore Series<sup>4</sup>

Healy Kit VP1000R<sup>5</sup> or VP1000S<sup>6</sup>

<u>Model #'s</u>	<u>Description:</u>
NAO	Encore 1 Grade Multi-hose
NA1	Encore 2 Grade Multi-hose
NA2	Encore 3 Grade Multi-hose
NA3	Encore 4 Grade Multi-hose
NG0	Encore 3 Grade Single-Hose
NG1	Encore 4 Grade Single-Hose plus 1
NG4	Encore 2 Grade Single-Hose
NJ0	Multi-hose Blender
NJ2	Multi-hose Blender plus 1
NL0 NL1 NL2 NL3	Encore X+1 Blender
NN0 NN1 NN2 NN3	Encore X+0 Blender

GasBoy 9800 Series (Gilbarco)

Healy Kit VP1000M<sup>7</sup>

<u>Model #'s</u>	<u>Description:</u>
9852 – Suffix1 Suffix2	
9853 – Suffix1 Suffix2	

Where:

Suffix1 can be:

A	=	Factory fabrication and assembly modifications to chassis
HC	=	High capacity model
M	=	Manifold supply inlet at the pumping unit inlet
TW1	=	Manifold supply inlet
TW2	=	Two individual supply inlets
X	=	Dispenser supplied by a submersible pump
Q	=	Utilizes an alternate meter and Pump

<sup>4</sup> Encore Dispensers factory equipped with Healy VP1000 will now have an angled (~13°) outlet casting.

<sup>5</sup> Kit used to install Healy components in Encore Balance series dispenser

<sup>6</sup> Kit used to install Healy components in Encore Assist series dispenser

<sup>7</sup> Kit used to install Healy components in GasBoy 9800 series dispenser

**Component**

**Manufacturer/Model**

Suffix2 can be:

B	=	Battery back-up for electronics
C	=	Pump Interface
D	=	DC conduit and junction box
F	=	Fuel filter
G	=	Imperial gallons registration
H	=	High hose retriever
I	=	Internal hose retriever
L	=	Lighted panel
N	=	Equipped to handle a long spout nozzle
P	=	Satellite dispenser as part of the unit (for connection to a master pump)
PP	=	Solenoid valves (optional only on pumps)
R	=	Liters registration
S	=	Piping for connection to satellite
SS	=	Stainless steel panels
SSA	=	Equipped with stainless steel doors
SSTS	=	Stainless steel tops and doors
T	=	Mechanical totalizer
U	=	Submersible drive relays
W	=	Heater
Y	=	Vapor recovery ready
Z	=	Front Load Nozzle
2	=	230 VAC/60hz operation
3	=	230 VAC/60hz operation with 380VAC/60hz motor (available on all models except 9852Q)
25	=	230VAC/50hz operation
35	=	230VAC/50hz operation with 380VAC/50hz motor
4	=	RS-485 interface
5	=	50hz operation
7	=	Electronic totalizer activator on both sides
9	=	Provided with 900-R Series TopKat

## Component

## Manufacturer/Model

### Wayne Harmony Series

Healy Kit VP1000N<sup>8</sup> or VP1000Q<sup>9</sup>

Model #'s  
prefix/VXXXXYZ/suffix

Description:

Where:

prefix =	Any number or letter (with a possible "H" for Harmony)
V =	Vista
X =	Any digit
Y =	D or P D = remote dispenser type for delivering fuel P = suction pump for delivering fuel
Z =	1, 3, 4, 5, 6, 7 or 8
suffix =	D1 or D2, and any combination of number(s) or letter(s)

### Wayne Ovation Series

Healy Kit VP1000P<sup>10</sup>

Model #'s  
XYZ/ABC

Description:

Where:

X =	B or R B = Blended Dispenser R = Regular Dispenser
Y =	Number of hoses per side 1 = one hose per side 2 = two hoses per side
Z =	Number of inlets per side 1 = one inlet 2 = two inlets 3 = three inlets

<sup>8</sup> Kit used to install Healy components to Harmony Balance series dispenser

<sup>9</sup> Kit used to install Healy components to Harmony Assist series dispenser

<sup>10</sup> Kit used to install Healy components to Ovation Balance or Assist series dispenser

## Component

## Manufacturer/Model

A	=	Number of grades 1 = one grade 2 = two grades 3 = three grades 4 = four grades 5 = five grades
B	=	Number of sides 1 = one side 2 = two sides
C	=	Number of columns 1 = one column 2 = two columns

### Wayne Vista Series

Healy Kit VP1000T<sup>11</sup> & VP1000V<sup>12</sup>

#### Model #'s                      Description:

prefix/VXXXYZ/suffix

Where:

Prefix=	Any number or letter
V	= Vista
X	= Any digit
Y	= D or P D = remote dispenser type for delivering fuel P = suction pump for delivering fuel
Z	= 1, 3, 4, 5, 6, 7 or 8
Suffix=	D1 or D2, and any combination of number(s) or letter(s)

### Wayne Global Century & Select Series<sup>13</sup>

#### Model #'s                      Description

3/GABCDE/Suffix

Where:

A	=	Model Series 2 = Global Century 7 = Select
---	---	--

<sup>11</sup> Kit used to install Healy components to 3V Vista series dispenser.

<sup>12</sup> Kit used to install Healy components to 1V and 2V Vista series dispenser.

<sup>13</sup> Dispenser configuration only available for purchase from Dresser Wayne. There is no Kit for retrofit of these dispenser types.

Component	Manufacturer/Model	
B	=	Cabinet Style 2 = Column Style
C	=	Flow Rate Capacity 0 = Standard Flow 4 = Twin I, Dual Filters
D	=	Number of Hoses & Orientation 1 = Single, Island-Oriented 2 = Twin I, Island-Oriented 3 = Twin II, Island-Oriented 7 = Twin I, Lane-Oriented OR Single Side, Lane-Oriented w/ "R" Suffix 8 = Twin II, Lane-Oriented
E	=	Dispenser Type D = Dispenser-Remote
Suffix	=	Any combination of letters or numbers

#### Wayne Reliance Series<sup>14</sup>

<u>Model #'s</u> <u>/GABCDE/Suffix</u>	<u>Description</u>
Where:	
A	= Model Series 5 = Reliance Mechanical Fleet – Pricing 6 = Reliance Mechanical Fleet – Volume Only
B	= Cabinet Style 2 = Column Style
C	= Flow Rate Capacity 0 = Standard Flow
D	= Number of Hoses & Orientation 1 = Single, Island-Oriented 2 = Twin I, Island-Oriented 3 = Twin II, Island-Oriented
E	= Dispenser Type D = Dispenser-Remote
Suffix	= Any combination of letters or numbers

<sup>14</sup> Dispenser configuration only available for purchase from Dresser Wayne. There is no Kit for retrofit of this dispenser type.

**Component**

**Manufacturer/Model**

FFS/Healy Universal Retrofit Manual<sup>15</sup>

Healy Kits

VP1000A<sup>16</sup>

VP1000D<sup>17</sup>

VP1000G<sup>18</sup>

VP1000H<sup>19</sup>

VP1000J<sup>20</sup>

Z071V<sup>21</sup>

Z070E<sup>22</sup>

Z008<sup>23</sup>

Z009<sup>24</sup>

---

<sup>15</sup> Any dispenser not currently listed in Exhibit 1 can be upgraded to Healy EVR using one of the kits listed in this section.

<sup>16</sup> Kit contains Universal Wire Harness for use in any dispenser make or model. For use with any VAC or VDC solenoid valves.

<sup>17</sup> Early Gilbarco Encore 300 Blender Dispensers – 120 VAC valves (mfg. before 04/2003).

<sup>18</sup> Wayne DL Non-Blender Dispensers – 120 VAC valves.

<sup>19</sup> Tokheim Premier C Blender Dispensers – 24 VDC valves.

<sup>20</sup> Early Tokheim Blender Dispensers – Combination 120 VAC & 24 VDC valves.

<sup>21</sup> Universal Vapor Kit.

<sup>22</sup> Universal Electrical Kit.

<sup>23</sup> Standard Low Profile Single Hose Dispenser Retrofit Kit.


<sup>24</sup> Standard Low Profile Dual Hose Dispenser Retrofit Kit.

Table 1  
Components Exempt from Identification Requirements

Component Name	Manufacturer	Model Number
Dispenser Kit	Healy	VP1000A VP1000D VP1000G VP1000H VP1000J VP1000M VP1000N VP1000P VP1000Q VP1000R VP1000S VP1000T VP1000V Z008 Z009 Z070E Z071V


**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-1  
Healy Model 900 EVR Nozzle**

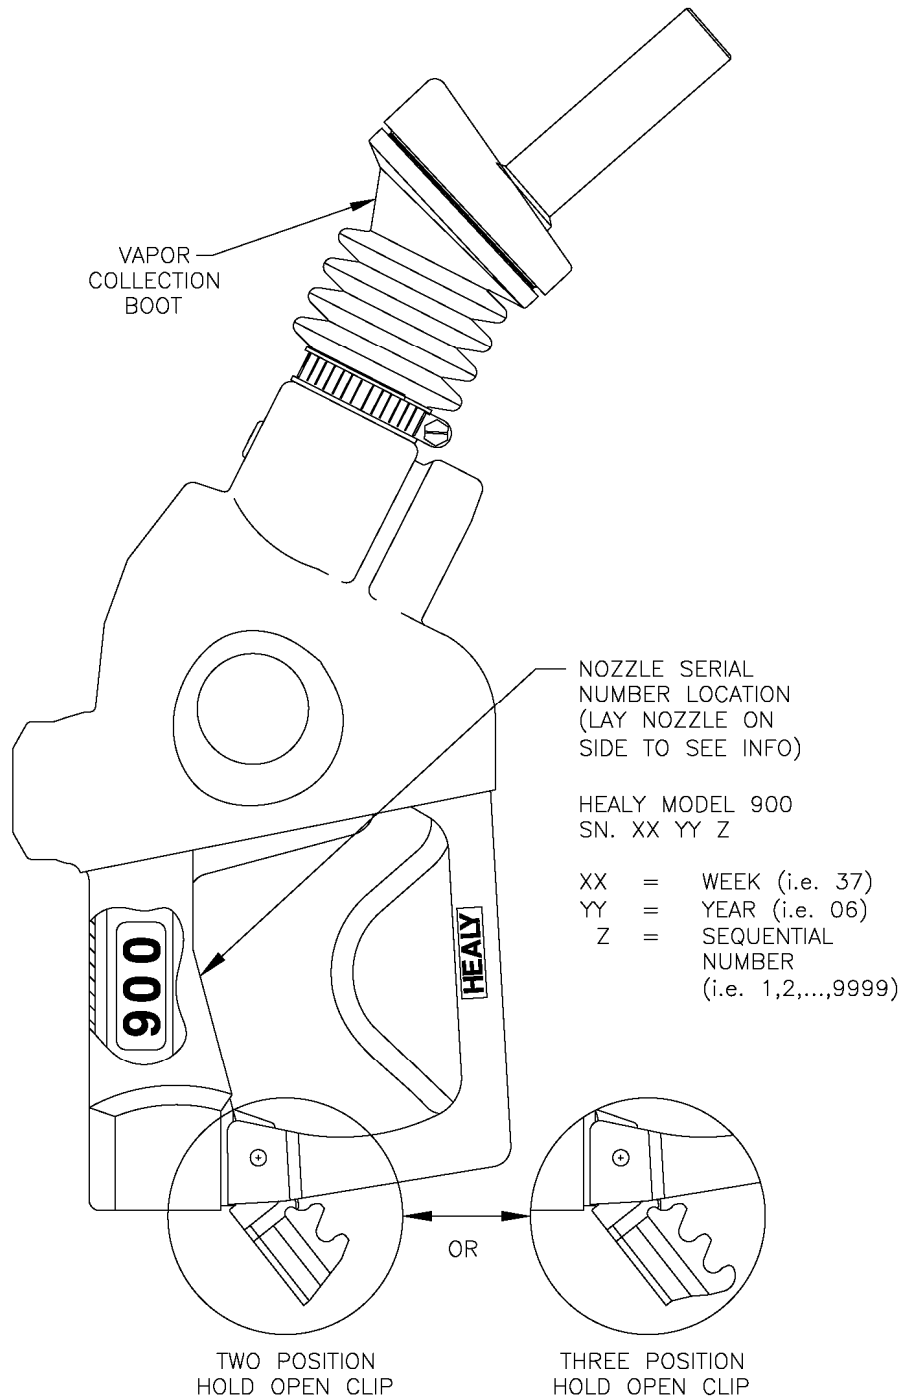


**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-2  
Healy Model 9961 Clean Air Separator**

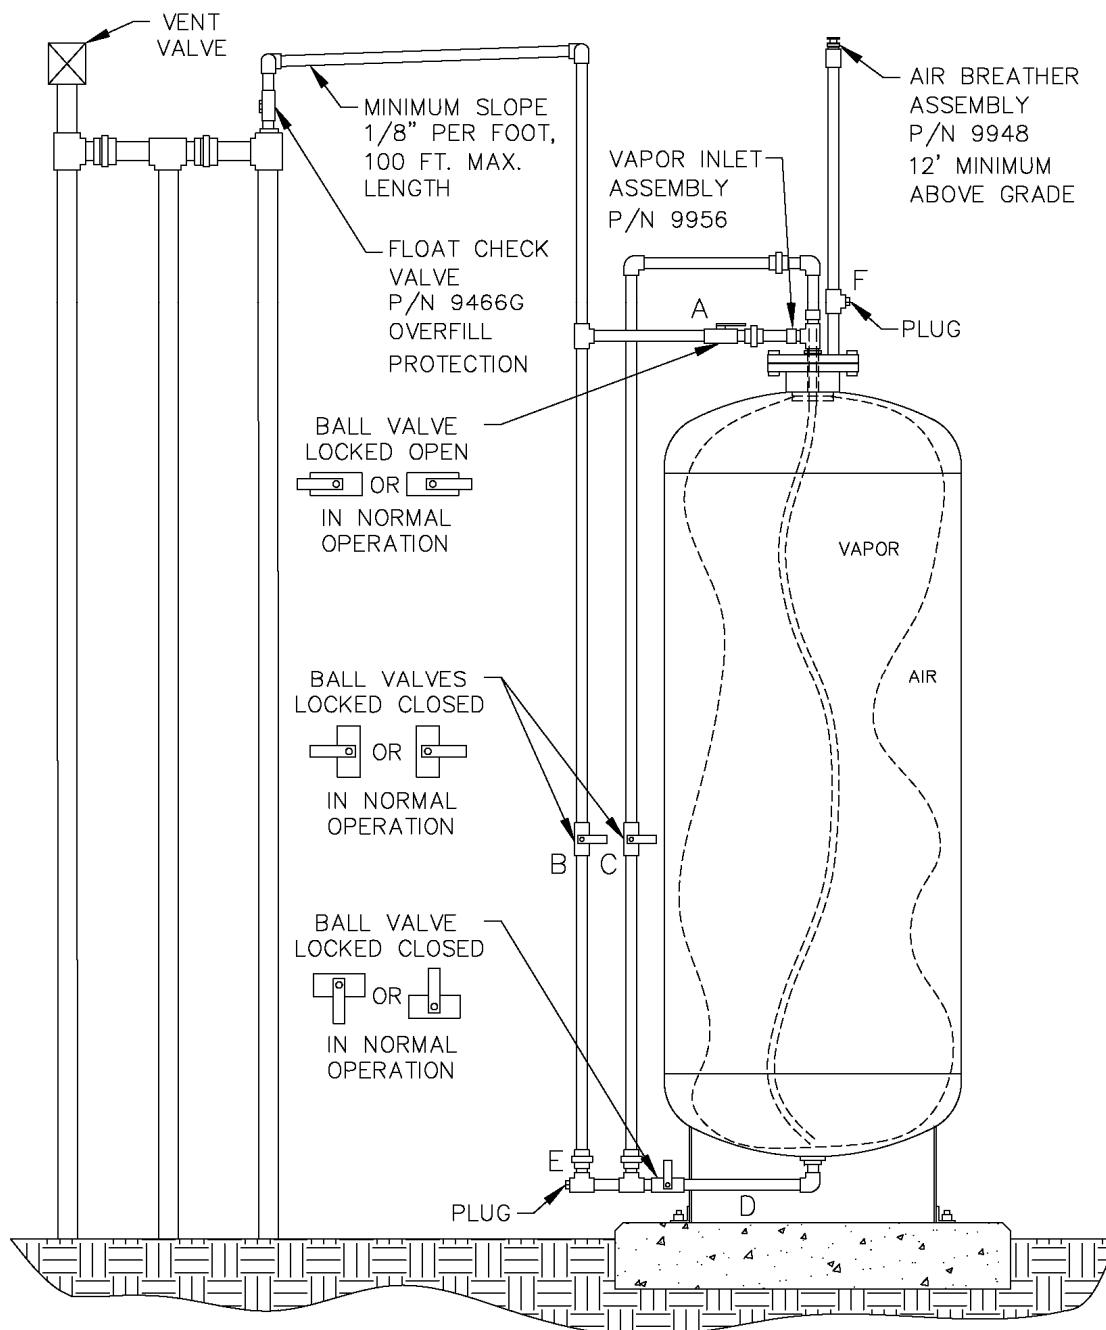


**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-3  
Healy Model VP1000 Vacuum Pump**

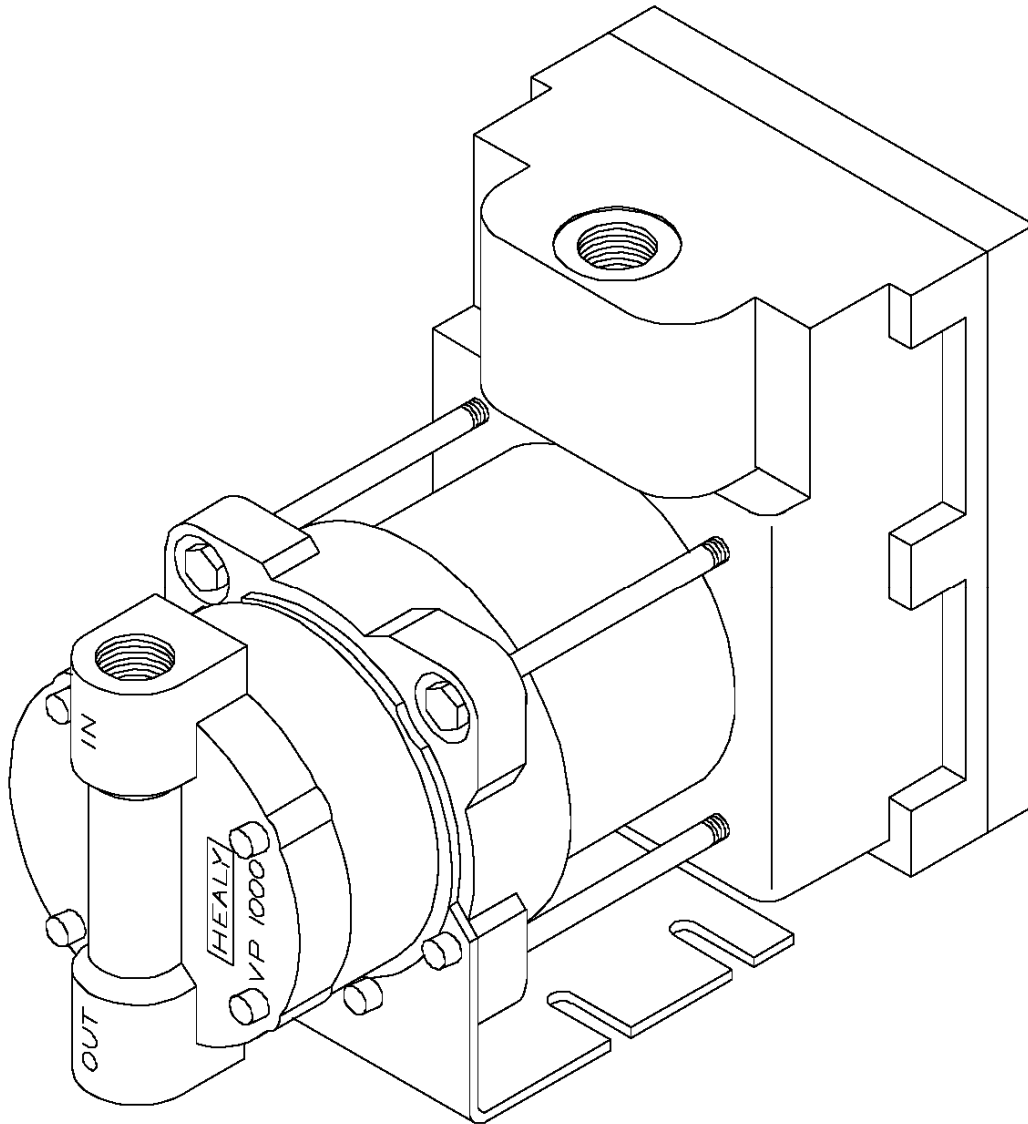


**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-4  
Hanging Hardware Selection Options  
Model 8701VV Breakaway and 1301 Flow Limiter**

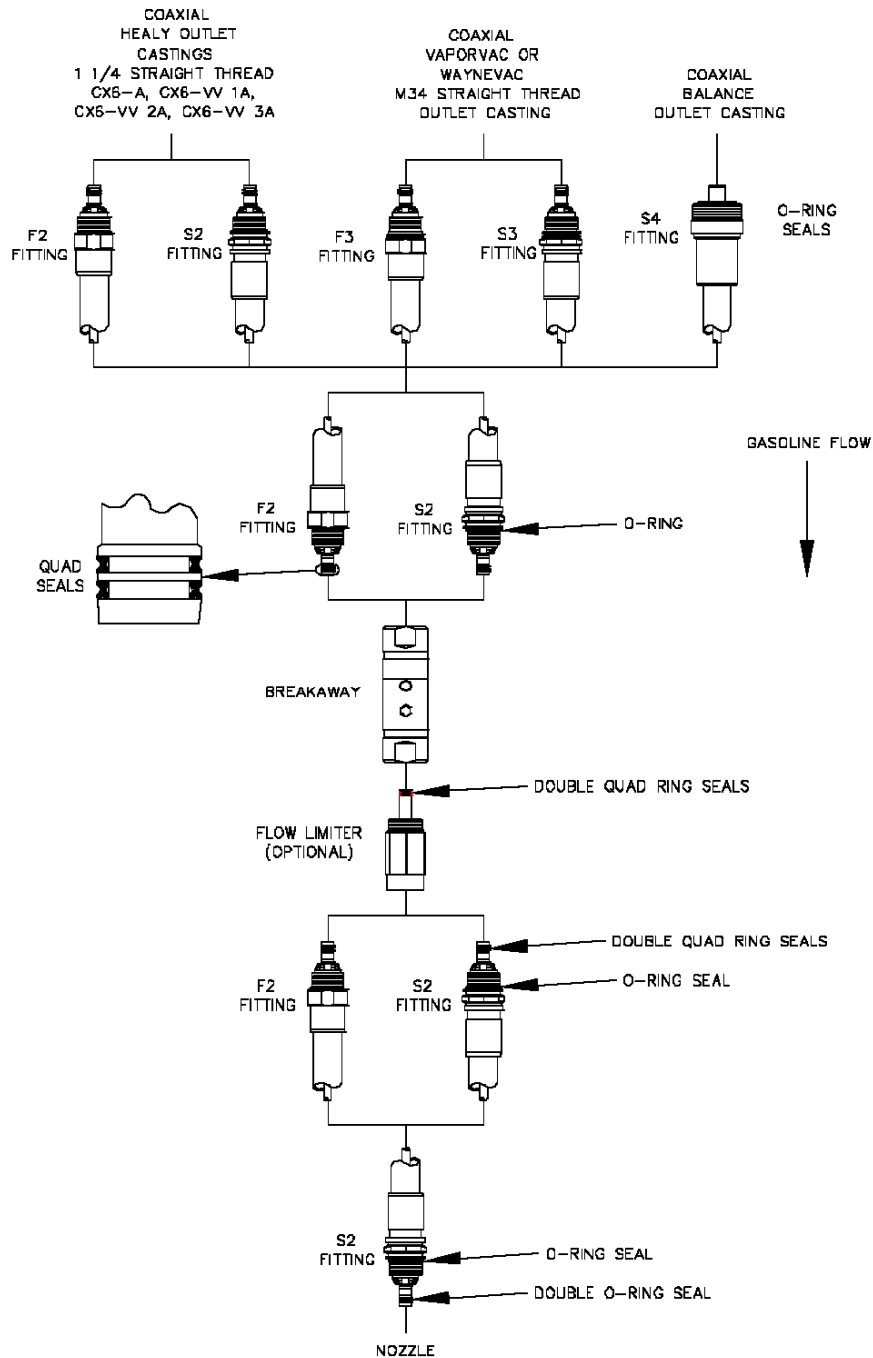


**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-5  
Hanging Hardware Selection Options  
Model 807 Swivel Breakaway and 1302 Flow Limiter**

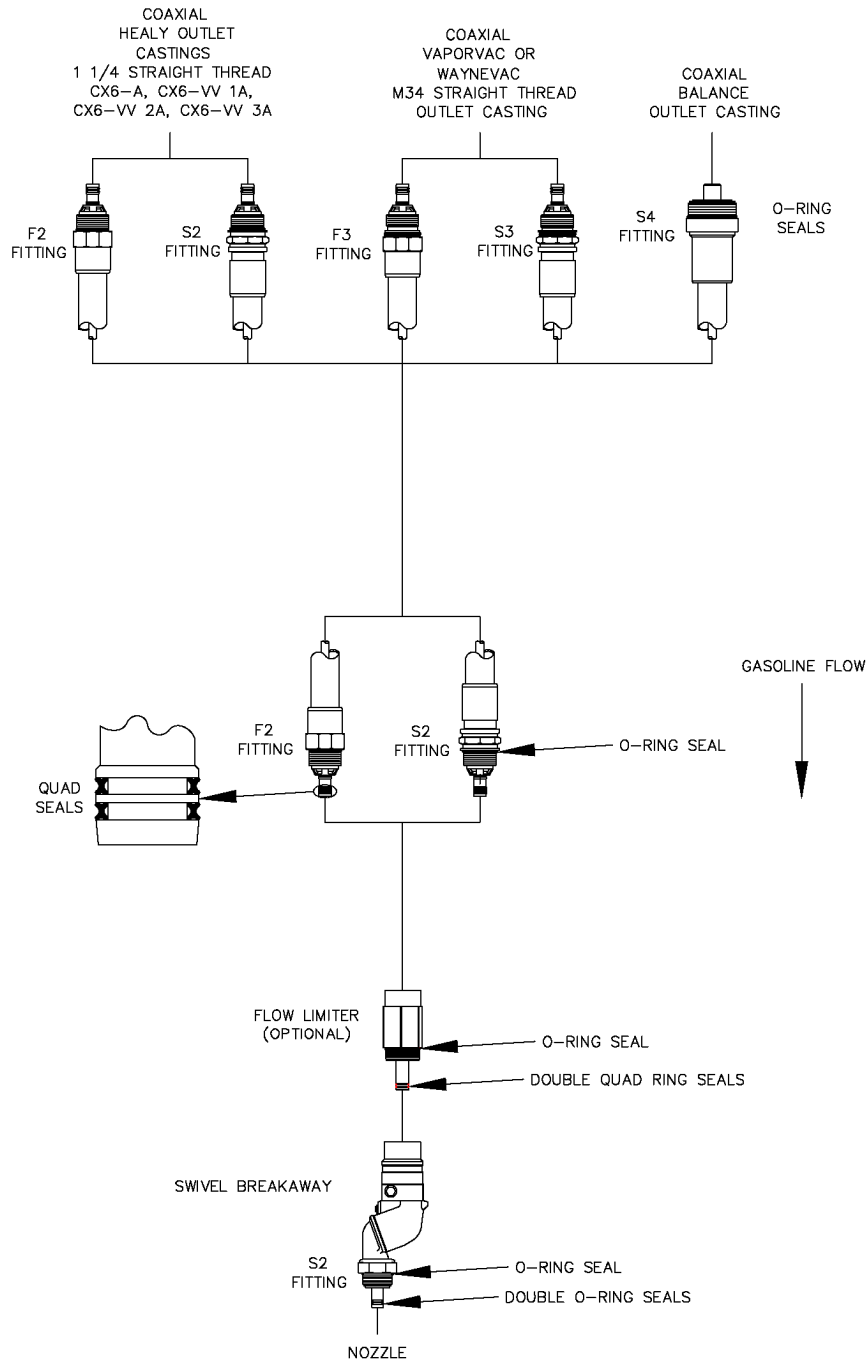


**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-6  
Healy Model CX6-A, CX6-VV1A, CX6-VV2A, CX6-VV3A  
Dispenser Conversion Adaptors**

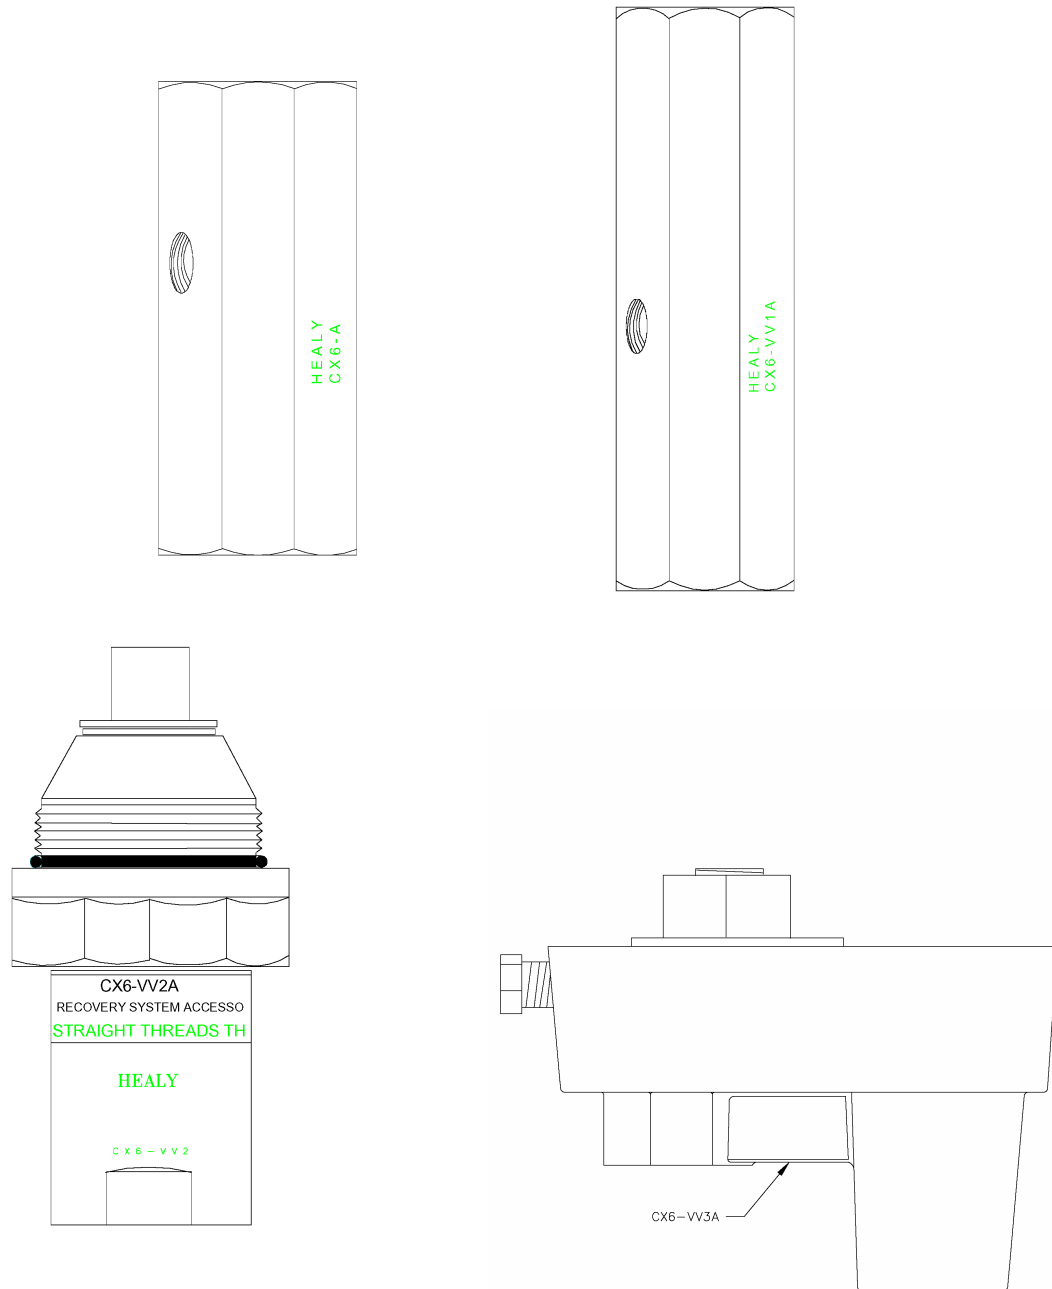


**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-7  
Healy Model 8701VV Breakaway**

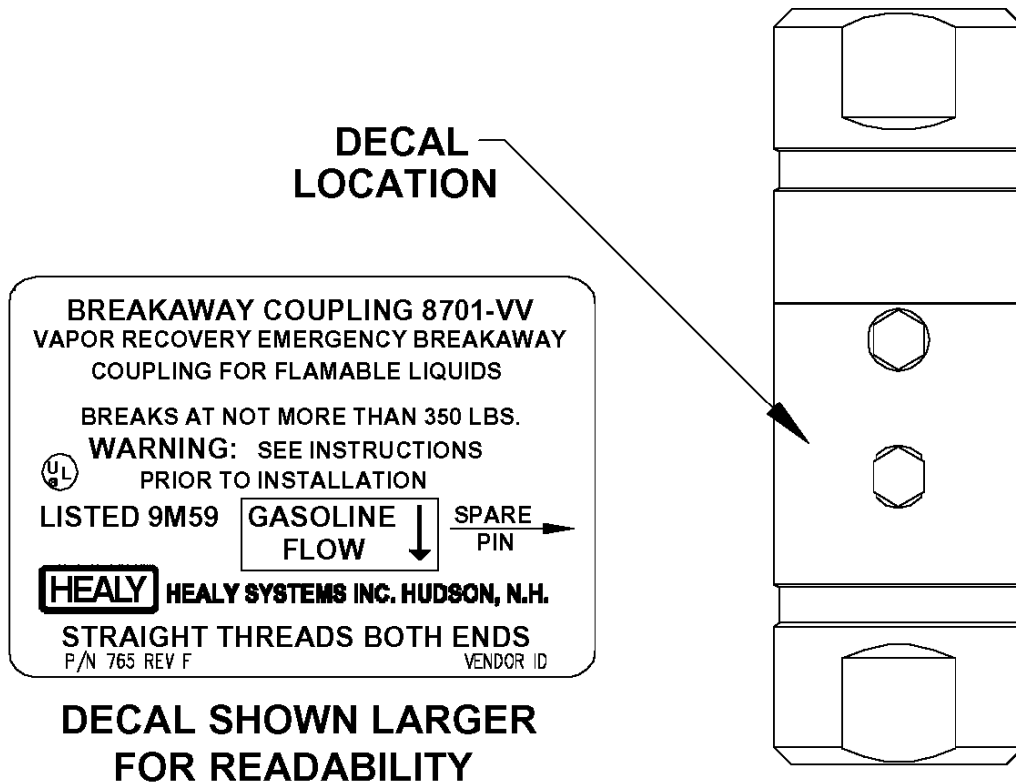

**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**


**Exhibit 1  
Figure 1A-8  
Healy Model 807 Swivel Breakaway**

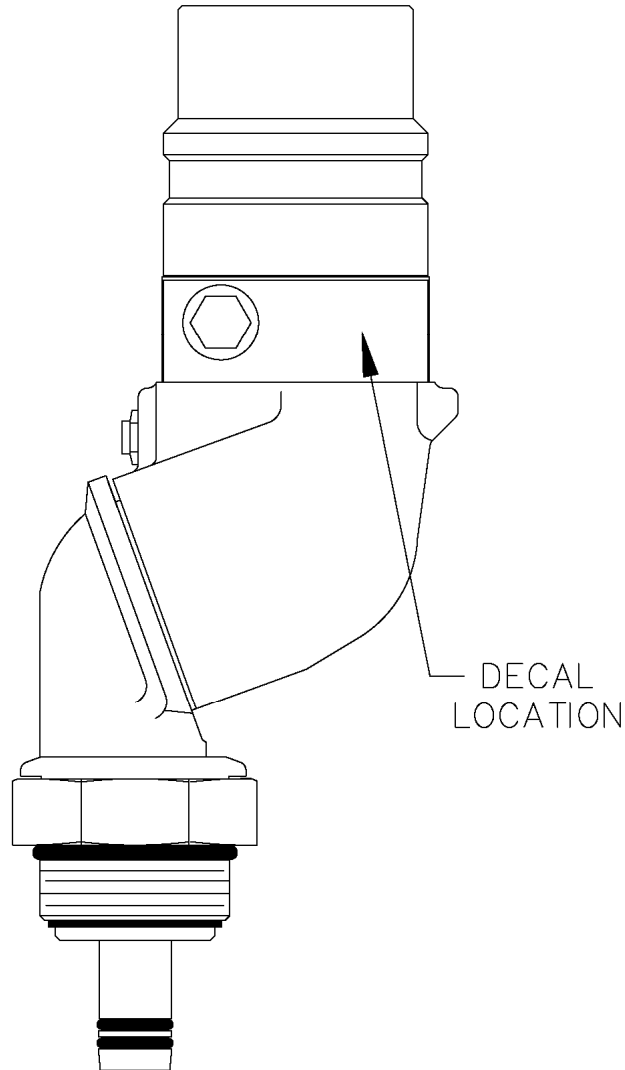

DECAL SHOWN LARGER  
FOR READABILITY

**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-9  
Healy Model 1301 Flow Limiter**

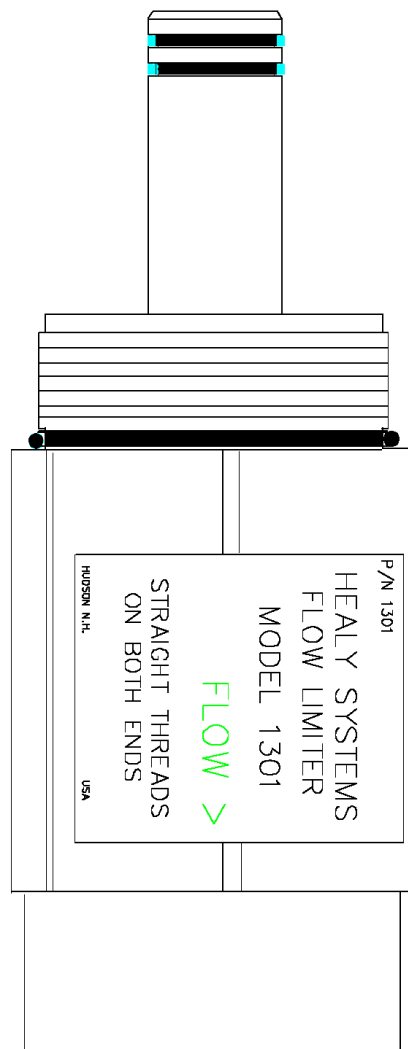

**Executive Order VR-201-C  
Healy Phase II EVR System  
Not Including ISD**

**Exhibit 1  
Figure 1A-10  
Healy Model 1302 Flow Limiter**

